



DO NOT DISCARD

Important information for the Airport Maintenance Department

1. Locate the frangible couplings and floor flanges that are provided with the sign. (Small sign orders may be packaged in the box with the sign. Larger order will have a separate carton containing this hardware). Coat the threads of the frangible coupling with anti-seize compound. Then screw them hand tight into the floor flanges.

Note: It is also crucial that the correct couplings be used with the sign. The coupling size and mode are stamped on the outside of the coupling. Incorrectly sized couplings will not meet FAA frangibility requirements.

2. Locate the power cord. It will be visible protruding from the power leg.

Note: The power cord and electrical components are located in the module nearest the nameplate on the end of the sign.

3. Slip the coupling/floor flange assemblies over each thru-column on the bottom of the sign. Tighten the set screws just enough to hold them in place. Floor flanges must be oriented with mounting holes perpendicular to sign base. For the power cord leg, pull enough power cord slack from the sign to connect with the isolation transformer secondary extension cord.

Note: In a typical remote L-867 base can installation the sign leg is connected to the remote can with 2" rigid galvanized steel (RGS) conduit. An isolation transformer secondary extension cord is fed through the conduit and connects the sign power cord plug to the isolation transformer secondary plug.

4. Locate the cable clamp. Tighten the cable clamp onto the isolation transformer secondary extension cord female plug at grade level. Ensure the cable clamp side labeled "TOP" is facing up. The cable clamp should nest on the underside of the floor flange and on top of the conduit that is flush with the surface of the concrete mounting pad. Insert the power cord plug (male) into the isolating transformer secondary extension cord (female).

Note: As required by the FAA, this step, in conjunction with step 6, ensures that the power cord will be disconnected/unplugged if the sign is knocked over.



LED GUIDANCE SIGN Size 1, 2, 3 and 5

Installation Instructions

DO NOT DISCARD

Important information for the Airport Maintenance Department

5. Lift the sign upright into place on the cement pad. Use the sign as a template to locate and mark mounting holes. Place sign off to one side and install anchor bolts. Recommended anchor bolts: 3/8" x 5" for mode 2 signs, 5/8" for mode 3 signs. Position the sign over the anchor bolts and fasten the floor flanges to the cement pad with lock washers and nuts. Temporarily loosen the coupling set screws. Tighten the frangible couplings 1/4 - 1/2 turn into the floor flanges with a pipe wrench so that the set screws are accessible from the face side of the sign. Floor flange/coupling assemblies may be rotated 180°, if necessary, if the set screws land on the opposite side of the sign when fully tightened. When finished, all set screws should be accessible from the same face side of the sign. **(Warning: Do not use the wrench above the frangible score.)** Ensure that the sign is level and the modules are aligned by sighting down the length of the tops. Tighten the slip fitter set screws using a socket wrench.

6. Locate the strain relief clamp inside of the sign on the light bar. Remove the sign cover nearest to the nameplate on the end of the sign by unscrewing the two turn fasteners and slide out the legend panels. Remove all slack in the power cord between the plug and the strain relief clamp, then tighten the set screw on the strain relief clamp. Excess slack in power cord should be zip-tied to the light bar using provided zip-tie. (As required by the FAA, this step, in conjunction with Step 4 ensures that the power cord will be disconnected/ unplugged if the sign is knocked over.)

7. Electrical adjustments are now required. Power supply settings have been factory set but must be rechecked with an RMS meter once installed in the airfield environment.

8. Replace any covers removed.

Note: Sometimes, legend panels seem to obstruct the re-installation of the top covers. If panels are not engaging on the underside of the top cover into the gasket channel, please try the following:

Engage the turn fasteners loosely. With the palms of your hands, slap or "pop" the centers of the opposing panels inward simultaneously. The internal pressure should apply a force that allows the top to drop into place. Apply pressure downward on the top. If the technique worked and panels are correctly installed, the resistance to tightening the turn fasteners will be eliminated.